 
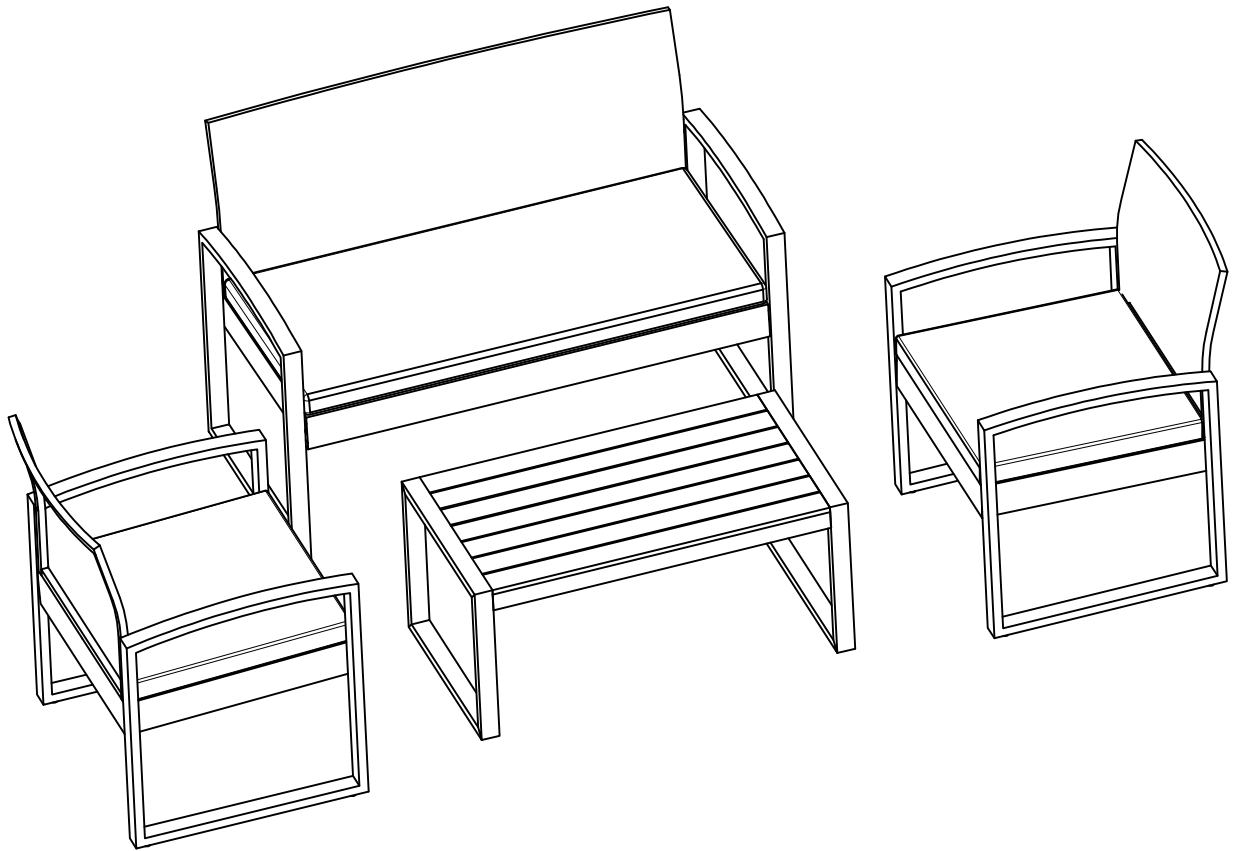 
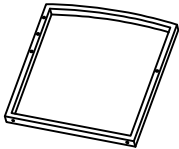 
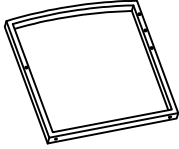 
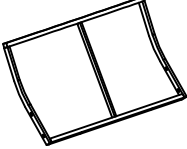 
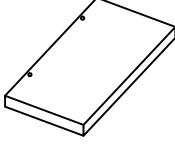 
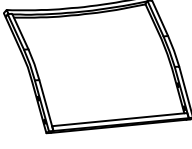 
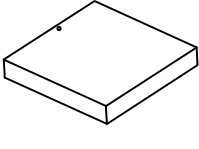 
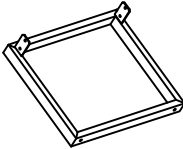 
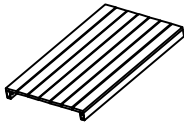 
 
 
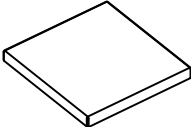 
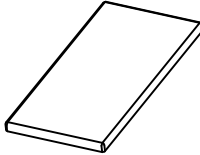 


ASSEMBLY INSTRUCTION

WICKER SET




I - PARTS AND HARDWARE


A - 3 pcs  Leg right	B - 3 pcs  Leg left	C - 1 pc  Back frame – Bench	D - 1 pc  Seat frame – Bench	E - 2 pcs  Back frame – Chair	F - 2 pcs  Seat frame – Chair
G - 2 pcs  Leg – Table	H - 1 pc  Table top	I - 28 pcs  Bolt M6x30	J - 8 pc  Bolt M6x15	K - 36 pcs  Washer	L - 16 pcs  Plastic feet
M - 2 pcs  Cushion – Chair	N - 1 pc  Cushion – Bench	1 pc  Allen Key 4			

II - BENCH

 
STEP 1:

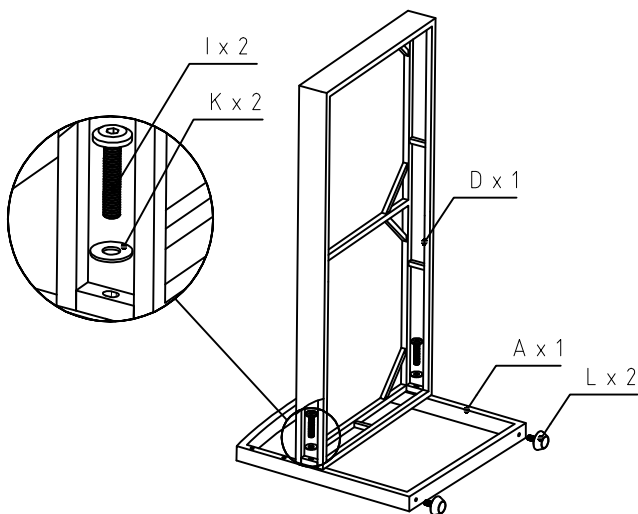

 
STEP 2:

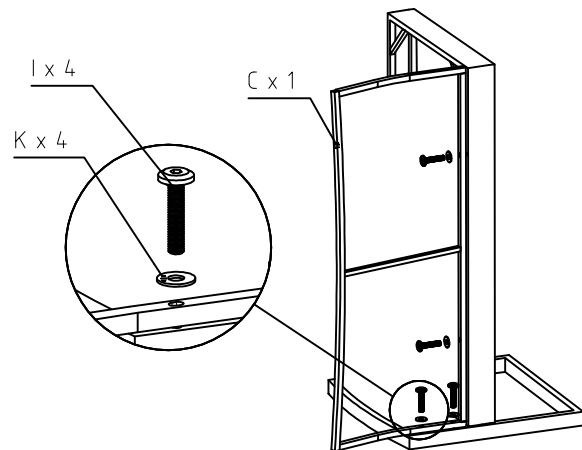

 STEP 3:

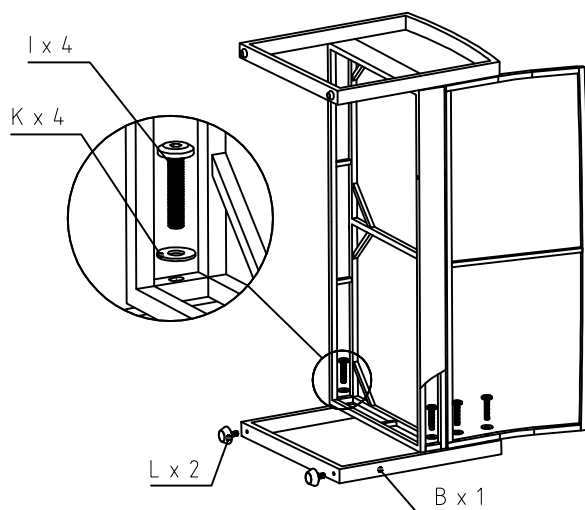


 STEP 4:

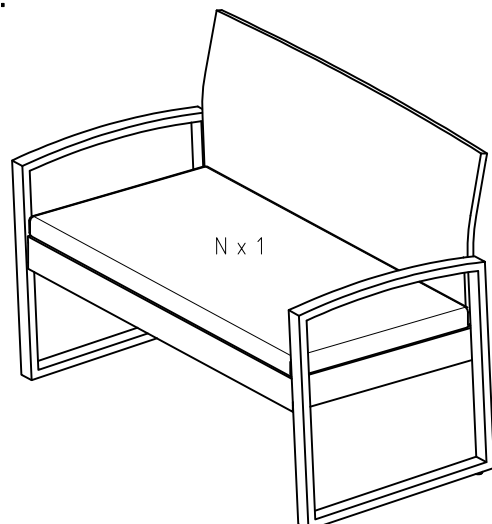


III - CHAIR

 
STEP 1:

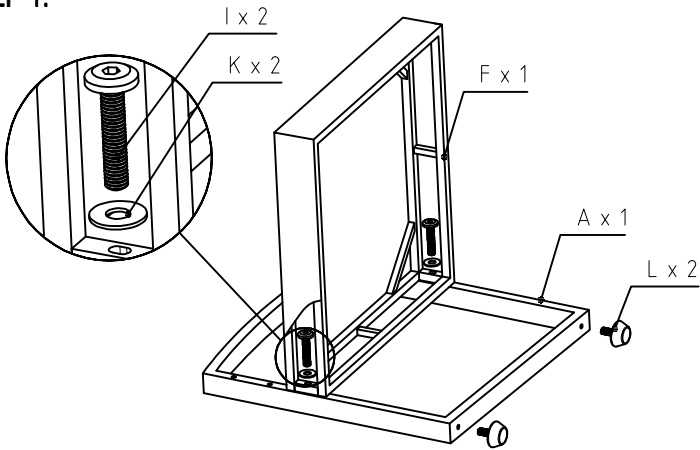

 
STEP 2:

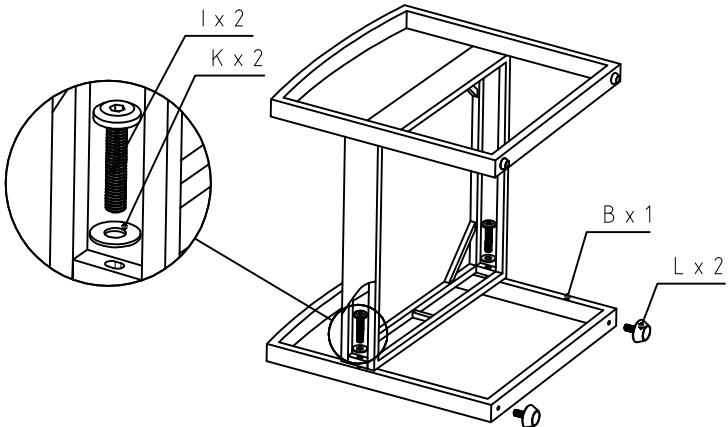

 STEP 3:

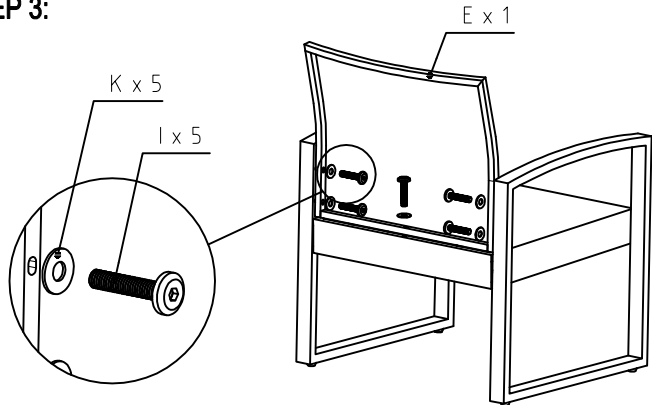


 STEP 4:

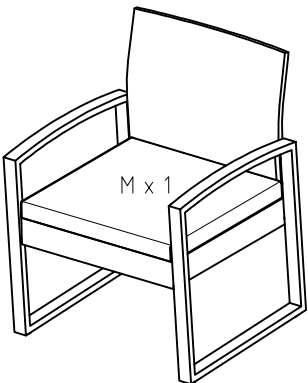


IV - TABLE

 STEP 1:

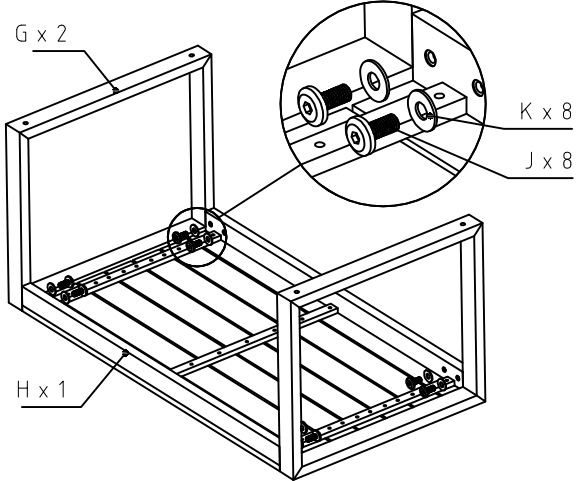

 STEP 2:

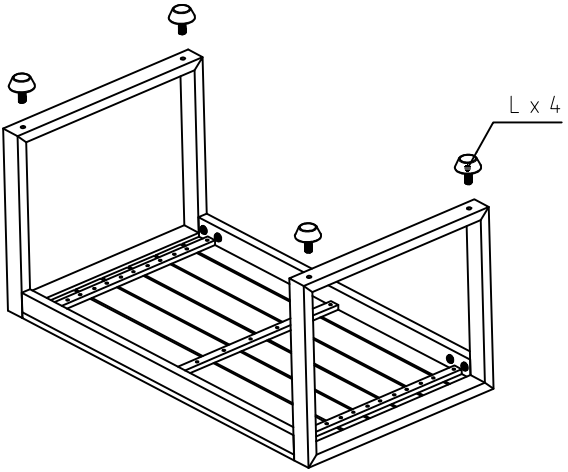

STEP 3:

